

HMI Display and Data Logger with Relays and Analog Outputs

HMI-001-RELAY

Data Logging, Relay Control, Alarms, Ethernet Connectivity, and Cloud Visualization

OSENSA's HMI-001 touch panel display provides remote ethernet connectivity, real-time display and data logging for up to 99 fiber optic input channels. It also supports up to 9 auxiliary sensor inputs from third-party Modbus RTU enabled devices for monitoring parameters such as ambient pressure and humidity. The unit includes nine user programmable form C relays, and eight 4-20mA analog outputs that can be assigned to any temperature point. The HMI includes native support for Modbus TCP/IP and DNP3 with TLS security. Log files can be retrieved on a USB memory stick or over a secure FTP or SSH connection. Optional cloud connectivity enables historical and real-time graphical visualization from any web enabled device.





Product Specifications

Model Name	HMI-001-RELAY
Touch Screen	7-inch full color, 800x480 pixels
Operating System	Linux
Boot Device	16 GB Removable micro SD card
Internal RAM	1 GB
Power	18~24 VDC, 10W max
Ethernet	RJ45 10/100 Mbps
USB	3x USB 2.0
Wi-Fi	Supported with dongle
RS-232	3 wire
RS-485	3 wire Modbus RTU Master
Relays	9 programmable form C, 10A, 250VAC
Analog Outputs	12 isolated 4-20mA outputs
Network Protocols	Modbus over TCP/IP, DNP3 with TLS over TCP/IP, SFTP and SSH
Real Time Clock	Yes, with internal battery
Operating Environment	-20°C to +70°C, 0 to 90% RH
Housing	Flame-retardant ABS, IP65 water resistant front panel
Dimensions	187mm Wide x 124mm High x 73mm Deep
Weight	0.7 kg
Product Compliance*	C E cUL us

*UL Certification optional

TECHNICAL SUPPORT

OSENSA Innovations offers onsite support, commissioning, and training for all of its products. For immediate assistance with any technical issue, please contact support@osensa.com or call 1-888-732-0016.

NARRANTY INFORMATION

OSENSA Innovations stands behind its products and services. All fiber optic temperature probes and signal conditioners ship with a full one year repair or replacement warranty. You may also purchase an extended five year warranty. Some conditions apply.

CUSTOM OEM SOLUTIONS

OSENSA offers cost-effective design and consulting services at discounted rates for high-volume OEM customers. Let the engineering team at OSENSA Innovations help you rapidly develop custom probes for your research application. OSENSA's team has many years of experience designing fiber optic temperature probes for various laboratory environments.

FURTHER INFORMATION

For more information on any of our products or services please visit our website: www.osensa.com or email: info@osensa.com.



8672 Commerce Court Burnaby, BC, Canada, V5A 4N7 Toll Free: 1-888-732-0016 International: 1-604-259-7177 Email: info@osensa.com



HMI Display and Data Logger with Relays and Analog Outputs

TECHNICAL SUPPORT

OSENSA Innovations offers onsite support, commissioning, and training for all of its products. For immediate assistance with any technical issue, please contact support@osensa.com or call 1-888-732-0016.

WARRANTY INFORMATION

OSENSA Innovations stands behind its products and services. All fiber optic temperature probes and signal conditioners ship with a full one year repair or replacement warranty. You may also purchase an extended five year warranty. Some conditions apply.

CUSTOM OEM SOLUTIONS


OSENSA offers cost-effective design and consulting services at discounted rates for high-volume OEM customers. Let the engineering team at OSENSA Innovations help you rapidly develop custom probes for your research application. OSENSA's team has many years of experience designing fiber optic temperature probes for various laboratory environments.

FURTHER INFORMATION


For more information on any of our products or services please visit our website: www.osensa.com or email: info@osensa.com.



Product Dimensions

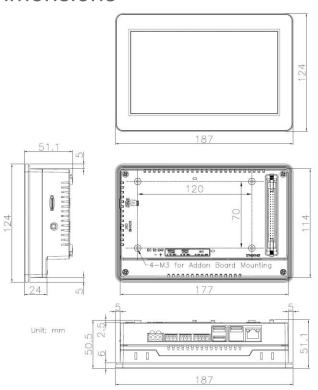

Panel Cut-out Dimensions

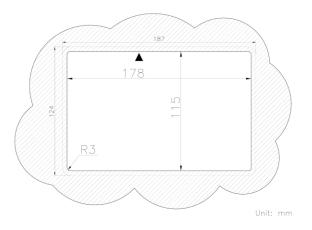

DIN-Rail Mount Installation

To mount the HMI-001-RELAY to a DIN-rail, the FGA-0159A ACC-HMI-DIN-MOUNTING-KIT is available from OSENSA Innovations. Refer to the MAN-DMK-0074A user manual for installation instructions.



HMI Display and Data Logger with Relays and Analog Outputs

TECHNICAL CURRORT

OSENSA Innovations offers onsite support, commissioning, and training for all of its products. For immediate assistance with any technical issue, please contact support@osensa.com or call 1-888-732-0016.

WARRANTY INFORMATION

OSENSA Innovations stands behind its products and services. All fiber optic temperature probes and signal conditioners ship with a full one year repair or replacement warranty. You may also purchase an extended five year warranty. Some conditions apply.

CUSTOM OEM SOLUTIONS

OSENSA offers cost-effective design and consulting services at discounted rates for high-volume OEM customers. Let the engineering team at OSENSA Innovations help you rapidly develop custom probes for your process control application.

OSENSA's team has many years of experience designing fiber optic temperature probes for various industrial environments.


FURTHER INFORMATION

For more information on any of our products or services please visit our website: www.osensa.com or email: info@osensa.com.




Panel Mount Installation


1. Prepare a panel cut-out according to the dimensions noted above and insert the display into the cut-out.

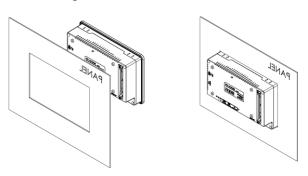

2. Insert the panel mount brackets into the bracket mounting holes as shown in the image below, pulling the bracket to lock it into place.

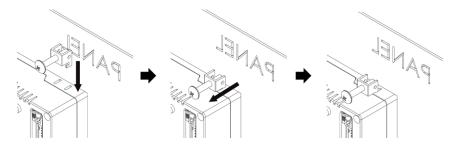

3. Tighten the bracket mounting bolts to secure the display to the panel. The recommended torque is 0.4

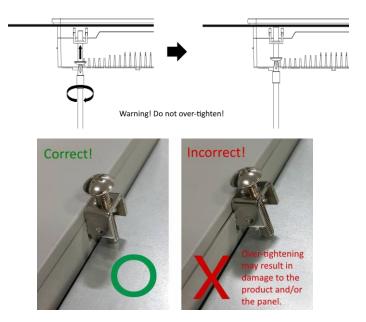

4. Repeat for each bracket and verify that the display is properly mounted and secured to the panel.

Toll Free: 1-888-732-0016 International: 1-604-259-7177 Email: info@osensa.com